

My Laptop will not Project: PC Users

My PC will not project in a smart classroom

Most PC laptops have the ability to toggle through 3 display states:

- laptop only
- projector only
- laptop and projector

Ideally most users will prefer simultaneous laptop and projector display.

Where are the Function (FN)/CRT/LCD Keys on my Laptop?

The Function (FN) and CRT/LCD keys needed to toggle through the 3 states are different on each laptop.

- In most cases there is a key near the space bar labeled "Fn".
- One of the the function keys at the top of the keyboard should also be labeled "CRT/LCD"
Note: an icon of a small display/large display may also be available. If both possibilities are present ALWAYS choose CRT/LCD.
- If you CAN NOT FIND THE CRT/LCD KEY: hold down the "Fn" button and push one of the function keys (F1 – F12) at a time located on the top of the keyboard to produce the toggle.
- Once you have found the correct key combination, hold down the Fn button while pressing the correct Function key once. If you do not get the desired result do it again. There are only three possibilities so you should only need to cycle through 3 times.
- Be aware that some laptops are slow to respond to the toggle so you need to be patient in between key presses.

